


## APPLICATION INSTRUCTIONS **BRILLIANT®** IRON-ON FILM FOR TEXTILES **C777**

### HOW TO APPLY THE HEAT TRANSFER FILM:

**1**

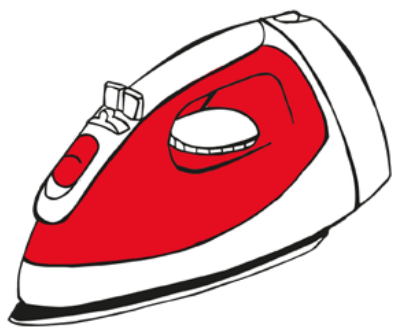


Set the iron to 121-135° C (no steam).

**2**



Put the piece of clothing on a flat surface that is safe for ironing and remove all wrinkles.

**3**

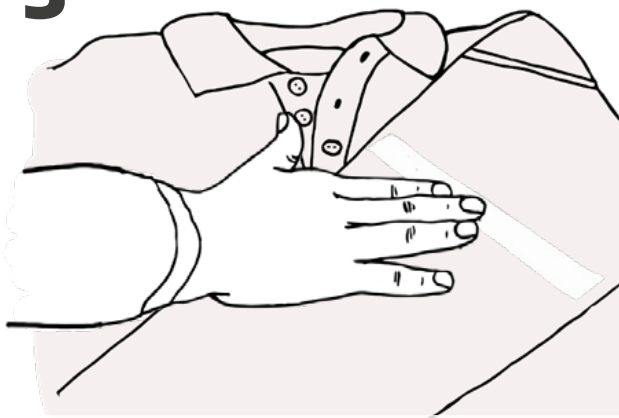

Place the patch where you would like to apply it with the grey side on the garment. Do not put the film over seams or hems.

**4**

Use an ironing cloth or a silicone-coated heat protection sheet for delicate or coated garment.

**5**



Press the iron for 15 to 20 seconds onto the patch. DO NOT move the iron around, just press. Lift the iron a few times and change its position. This way you make sure that pressure is also applied in the steam hole areas.

**6**



Allow the fabric to cool down, then remove the carrier film.

**DONE!**



**PLEASE NOTE:** The wash durability of the product improves with higher temperature and firmer pressure during application. Transfers are not suitable for every fabric (e.g. nylons or clothing with a water repellent finish).

Rev.: October 2016